


## StarMOBILE Quick Start Networking Guide



This guide outlines the steps required to initially configure your *StarMOBILE* for networking. For additional help, refer to the networking guides and training aids located in the Download Center and Training Aids sections at [www.dcctools.com](http://www.dcctools.com).

# Before You Begin

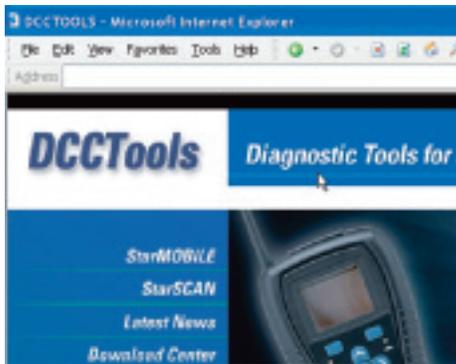

1 Check the Latest News section at [www.dcctools.com](http://www.dcctools.com) to verify that you have the latest *StarSCAN* & *StarMOBILE* Update CD.

2 Using the latest *StarSCAN* & *StarMOBILE* Update CD, install the *StarMOBILE* Desktop Client software on a network connected PC.


3 If your *StarMOBILE* device software is below 0.29.7, use the *StarSCAN* & *StarMOBILE* Update CD to upgrade your *StarMOBILE* device.



**Note:** This step is only necessary when initially setting up your *StarMOBILE* for networking. Once initial networking is set up, your *StarMOBILE* Desktop Client will upgrade your *StarMOBILE* device software automatically when it connects to the *StarMOBILE* device.



# Gather Network Information

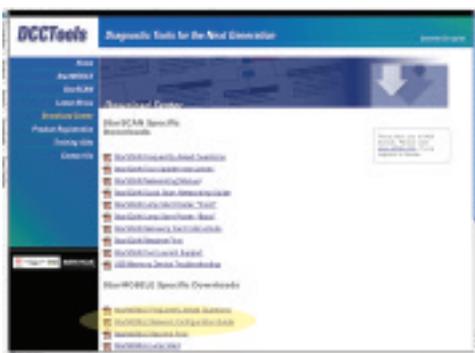

Download the *StarMOBILE* Network Configuration Guide located in Download Center at [www.dcctools.com](http://www.dcctools.com), and print out the Network Configuration Worksheet found near the beginning of this document.

**Network Configuration Guide**

Use the Network Configuration Worksheet below to capture information on your network prior to starting the *StarMOBILE* device configuration. You should consult your Network Systems Coordinator for this information.

StarMOBILE Network Configuration Worksheet	
<b>Connection Settings</b>	
Connection Type	WIRED WIRELESS
W/ Wireless	
Wireless SSID	
Encryption Type	
Encryption Key	
Encryption Authentication Type	Open System Shared Key
<b>IP Settings</b>	
DHCP Present	yes no
W/ No DHCP	
Static IP Address*	
Subnet Mask	

Ask your Network Systems Coordinator to fill out the Network Configuration Worksheet.

## Ensure *Pass-Through* Mode

You must be in *Pass-Through* mode in order to network to your *StarMOBILE* device. *Pass-Through* mode is indicated by a computer icon in the top left corner of the screen.



If the icon in the top left corner is a computer screen, you are in *Pass-Through* mode and can proceed to the *Restore Factory Defaults* section below.



If the icon is anything other than a computer screen (for example a tape icon), you need to change the operating mode of your *StarMOBILE* device.



If the icon is a tape, you are in *Flight Recorder* mode. To exit out of *Flight Recorder* mode, do the following:

- 1 Press **Unlock**.
- 2 Then press **Cancel** within 10 seconds of each other.

## Restore Factory Defaults

To avoid potential problems with previous attempts to setup your *StarMOBILE* device for networking, be sure to reset your device to the factory defaults by performing the following steps:



- 1 From the main menu on the *StarMOBILE* device, press the down arrow to **Settings** then press **Select**.



- 2 From the **Settings** screen press the down arrow to **Restore Factory Defaults** then press **Select**.



- 3 Press the **Enter** Button.
- 4 The *StarMOBILE* device will automatically reboot.


## Connect to the StarMOBILE Configuration Web Page



- 1 Connect *StarMOBILE* to an active network jack.




- 2 Go to the System Status screen and find the IP address.

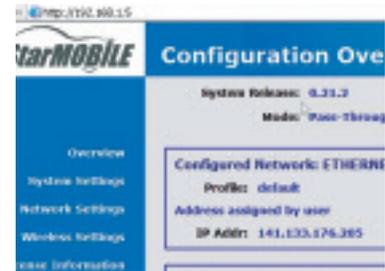

- 3 On the PC open a new internet browser, in the address field type in the address of your *StarMOBILE* device.\*

\* The *StarMOBILE* Configuration Web Page may not appear on some more complex networks. If the webpage does not appear, refer to the networking guides and training aids located in the *Download Center* and *Training Aids* sections at [www.dctools.com](http://www.dctools.com) for further assistance.

## Transfer Network Settings

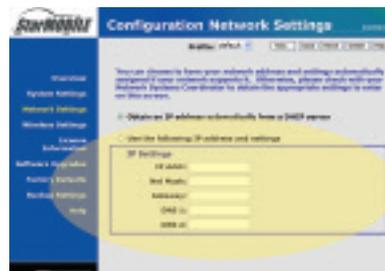


- 1 Select Network Settings, then transfer wired network settings from the Network Configuration Worksheet to the *StarMOBILE* Configuration Web Page.



- 2 Once your network settings are transferred, reboot your *StarMOBILE* device by powering the device down and back up again.

## Launch the StarMOBILE Desktop Client

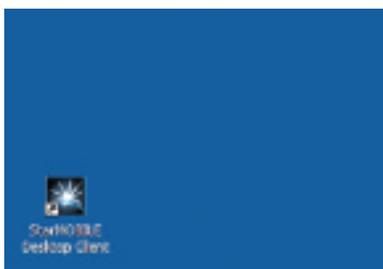

On the PC, double click on the *StarMOBILE* Desktop Client icon to run the application.



Follow the instructions of the *StarMOBILE* Discovery Wizard.



Your *StarMOBILE* system should now be ready for use as a Pass-Through device.